

Fig. 1

32
Apply first amounts of
a conductive adhesive
to each of the
piezoelectric mounting
pads

33
Allow the first amounts
of the applied
conductive adhesive to
cure

34
Apply second amounts
of a conductive
adhesive to each of the
PC board mounting
pads

36
Place the piezoelectric
device on the PC board

38
Cure the second
amounts of conductive
adhesive to attach the
piezoelectric device to
the PC board

Fig. 2

OFFICE OF THE ATTORNEY GENERAL

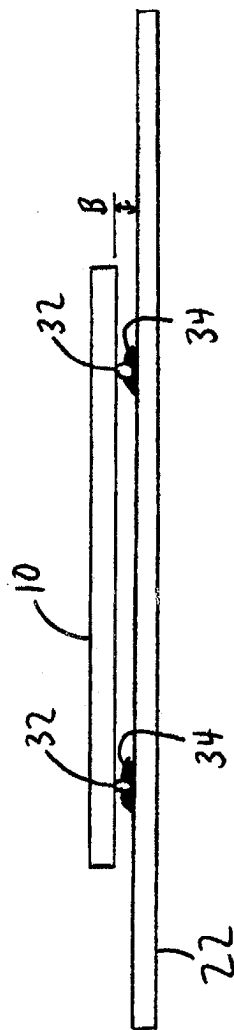


Fig. 3